


## Управление частотами модема Fibocom L8x0-GL

Зайдите в терминал и откройте порт модема:

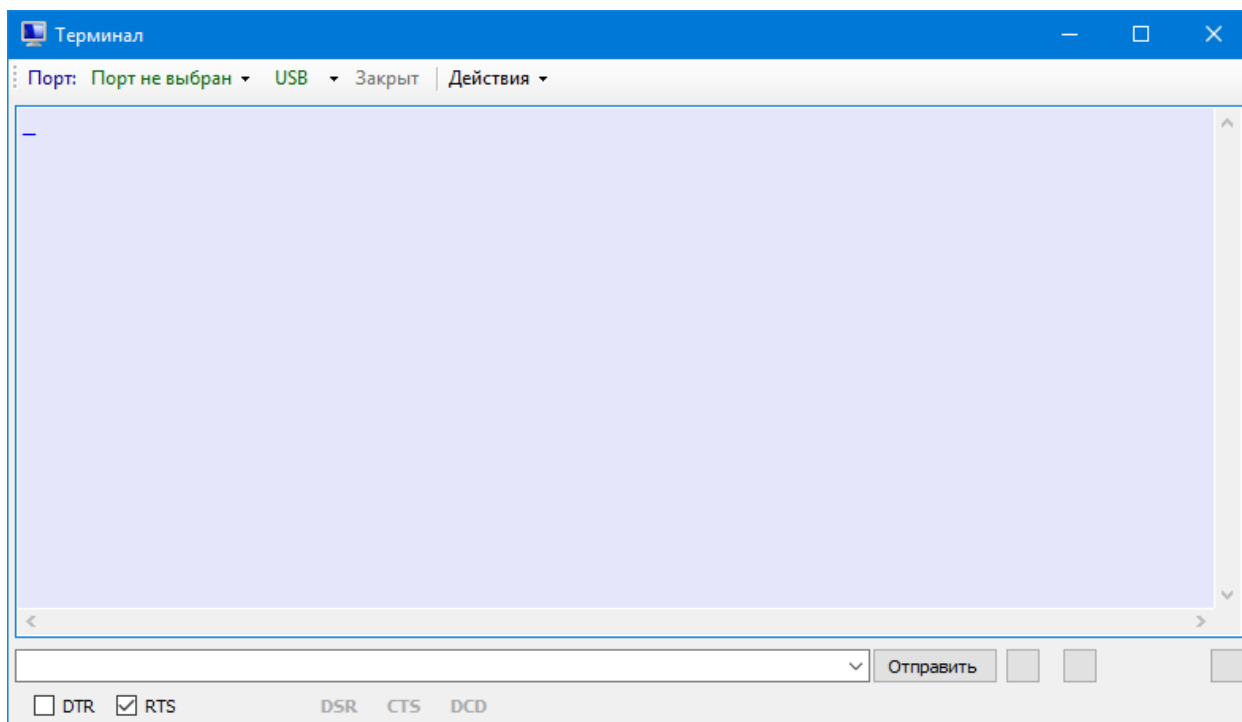

Выбрать только 3G

Lock to WCDMA only `at+xact=1`

Только 4G

Lock to LTE only `at+xact=2`

4G в приоритете

Lock to LTE and WCDMA, and LTE is as preferred: `at+xact=4,2`

3G в приоритете

Lock to LTE and WCDMA, and WCDMA is as preferred: `at+xact=4,1`

3G только band 1 (2100 МГц)

Lock to WCDMA B1 only: `at+xact=1,,,1`

Только 3G (B1 и B8)

Lock to WCDMA B1 and B8: `at+xact=1,,,1,8`

Другие примеры:

Lock to WCDMA B1 B2 and B4: `at+xact=1,,,1,2,4`

Unlocking WCDMA band: `at+xact=1,,,0`

Lock to LTE B1 only: `at+xact=2,,,101`

Lock to LTE B3 B8 and B38: `at+xact=2,,,103,108,138`

Unlocking LTE band: `at+xact=2,,,0`

Supports all WCDMA bands and LTE supports only B3: `at+xact=2,,,103;at+xact=4,2 13?`

Supports all LTE bands and WCDMA supports only B8: `at+xact=1,,,8;at+xact=4,2`

сброс на параметры по умолчанию - AT&F